




Technology From another World

## ALIEN WARP∞ HELP FILES




## Fuel Terminals

1. Pump Controllers
2. Wifi Pump Controllers
3. Tank Gauges

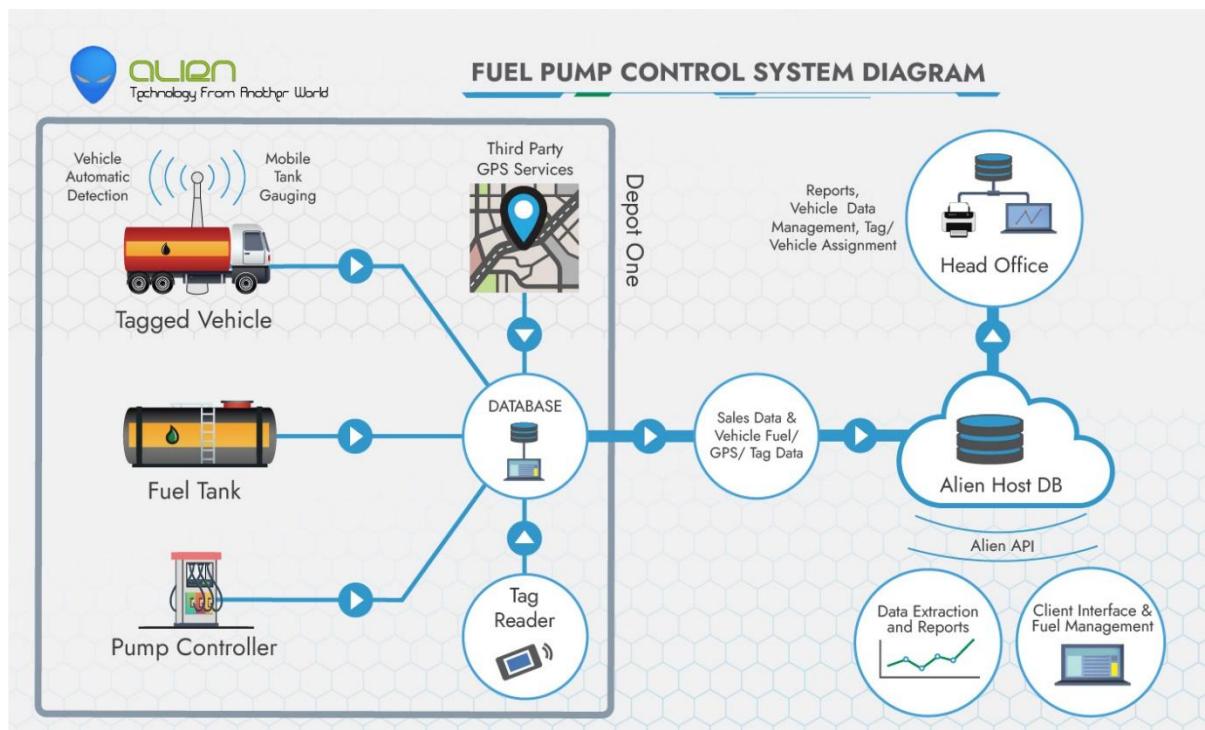

## FUEL PUMP CONTROL SYSTEM DIAGRAM

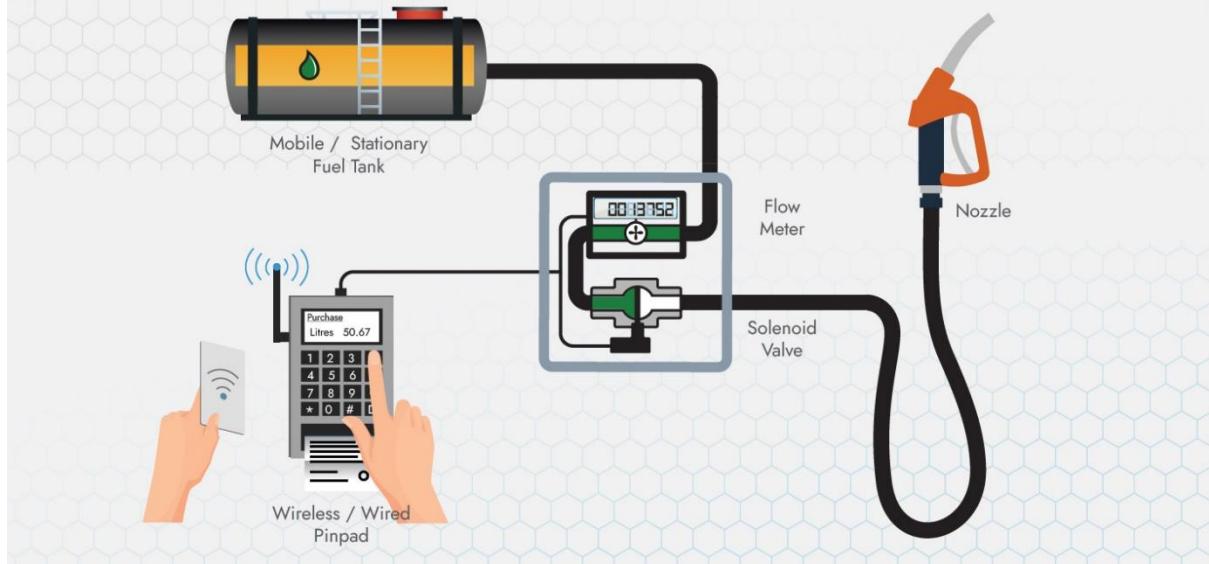

## Wired Pump Controller Troubleshooting

### WIRED PUMP CONTROLLER SPECIFICATIONS

RS485 connectivity

TCP/IP connectivity

RJ45 connectivity

Dimensions – 3.9cm(W) x 8.7cm(H) x 2.3cm(D)

Weight – 40g

### FEATURES


Real-time data

Ethernet


Easy Protocol

Set-up

Easy to troubleshoot

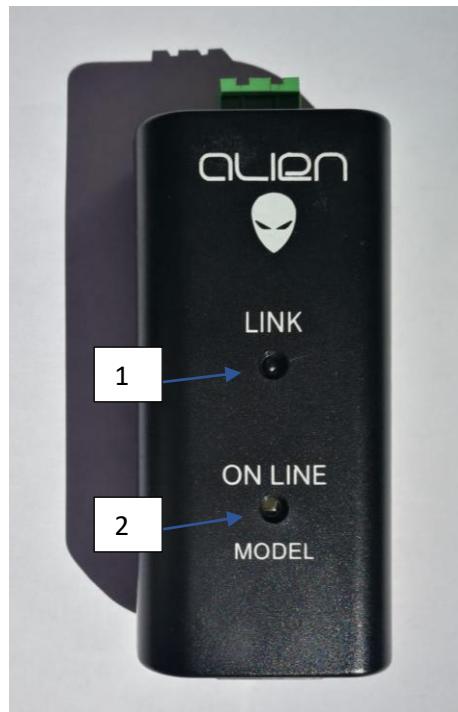


- 1) If your power indicator LED RX TX light is no longer luminous and pulsating, check your 12V POE switch.
- 2) If your communication indicator LED light is no longer luminous, check if your RJ45 cable is firmly plugged into your wired pump controller into your router.

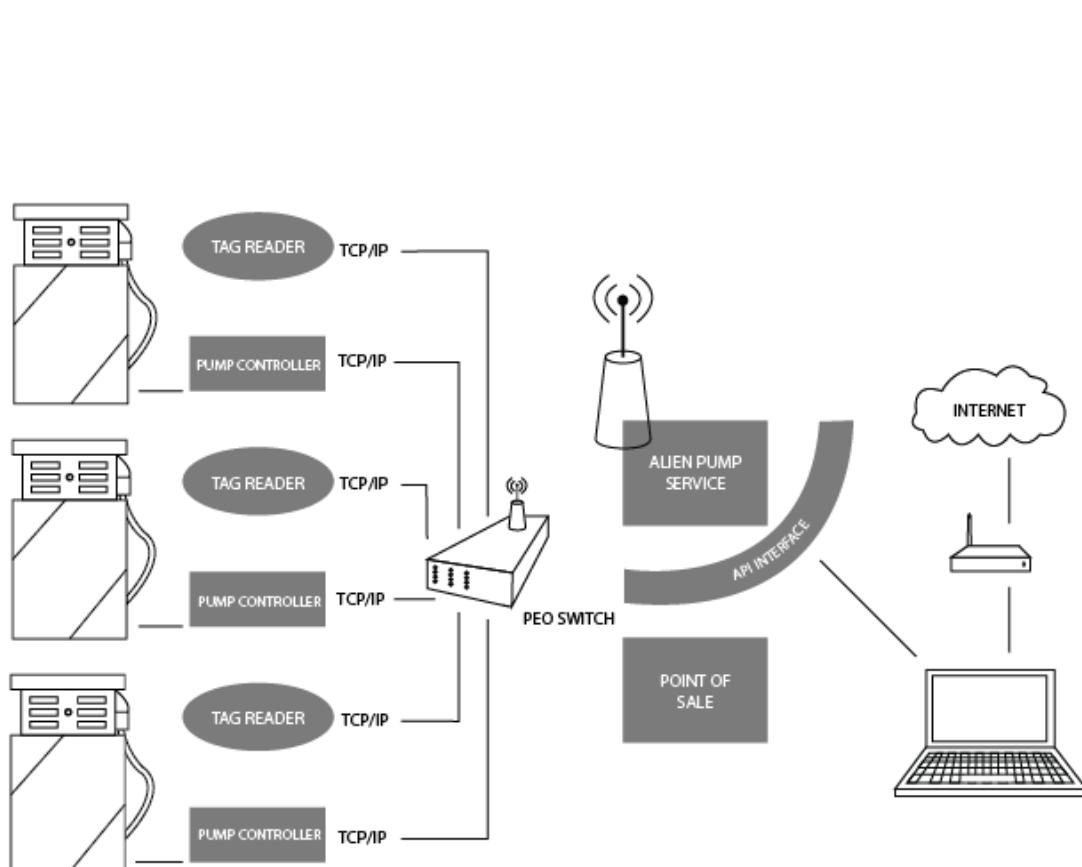

The Alien Pump Service is a stand-alone Windows service that serves as intermediary, gateway and communications director to the POS installations. APC's are particular to the type of pump it is connected to.

## Pump controller configuration

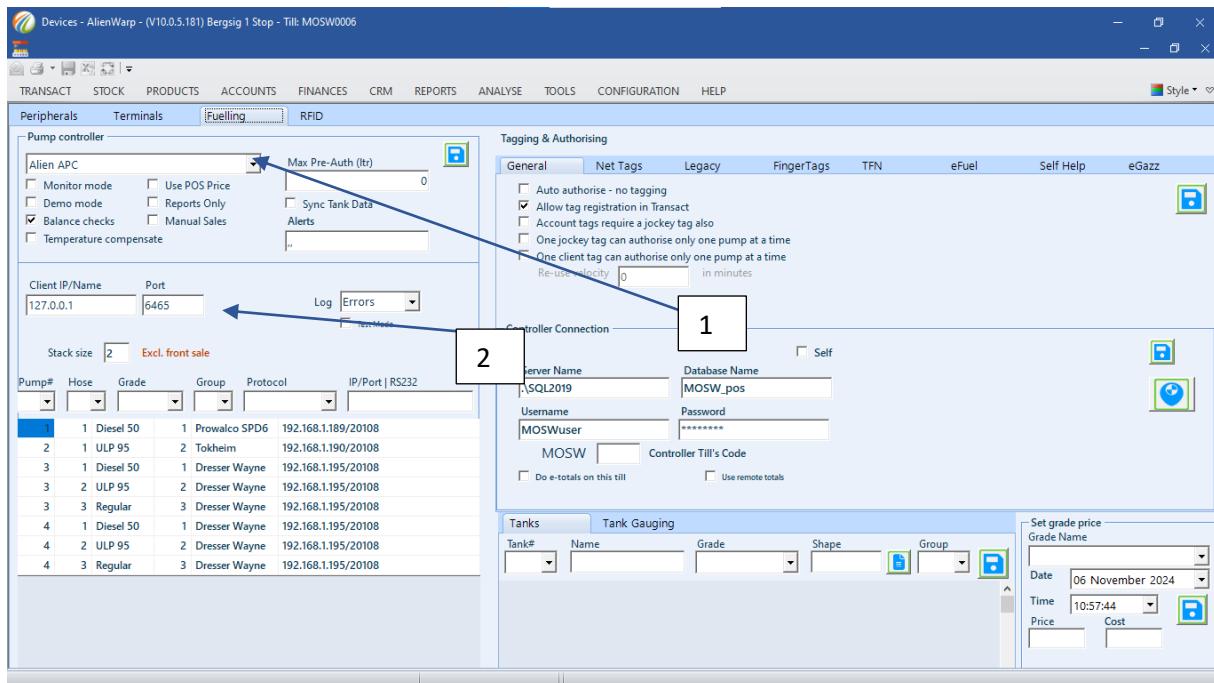

- 1) Select the fuel pump controller type in the dropdown selection menu.
- 2) Enter the client IP/Name and port number, then click the save button to capture the changes.

### WIFI PUMP CONTROLLER SPECIFICATIONS

RS485 connectivity

TCP/IP connectivity

RJ45 connectivity

Dimensions – 3.9cm(W) x 8.7cm(H) x 2.3cm(D)

Weight – 41g

### FEATURES


Real-time data

Ethernet


Easy Protocol


Set-up

Easy to troubleshoot

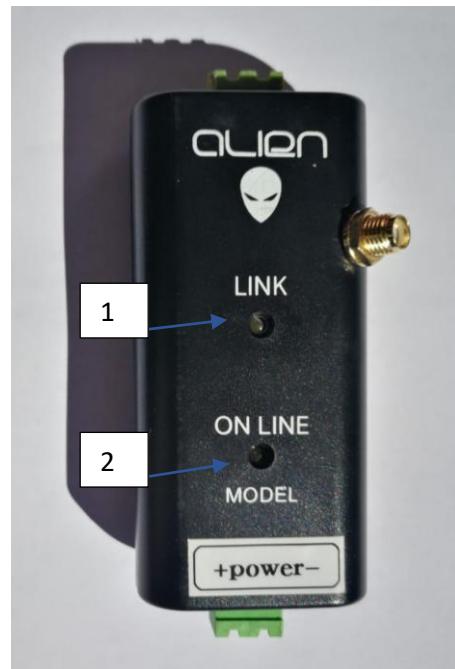


- 1) If your power indicator LED RX TX light is no longer luminous and pulsating, check your 12V POE switch.
- 2) If your communication indicator LED light is no longer luminous, check if your RJ45 cable is firmly plugged into your wired pump controller into your router.

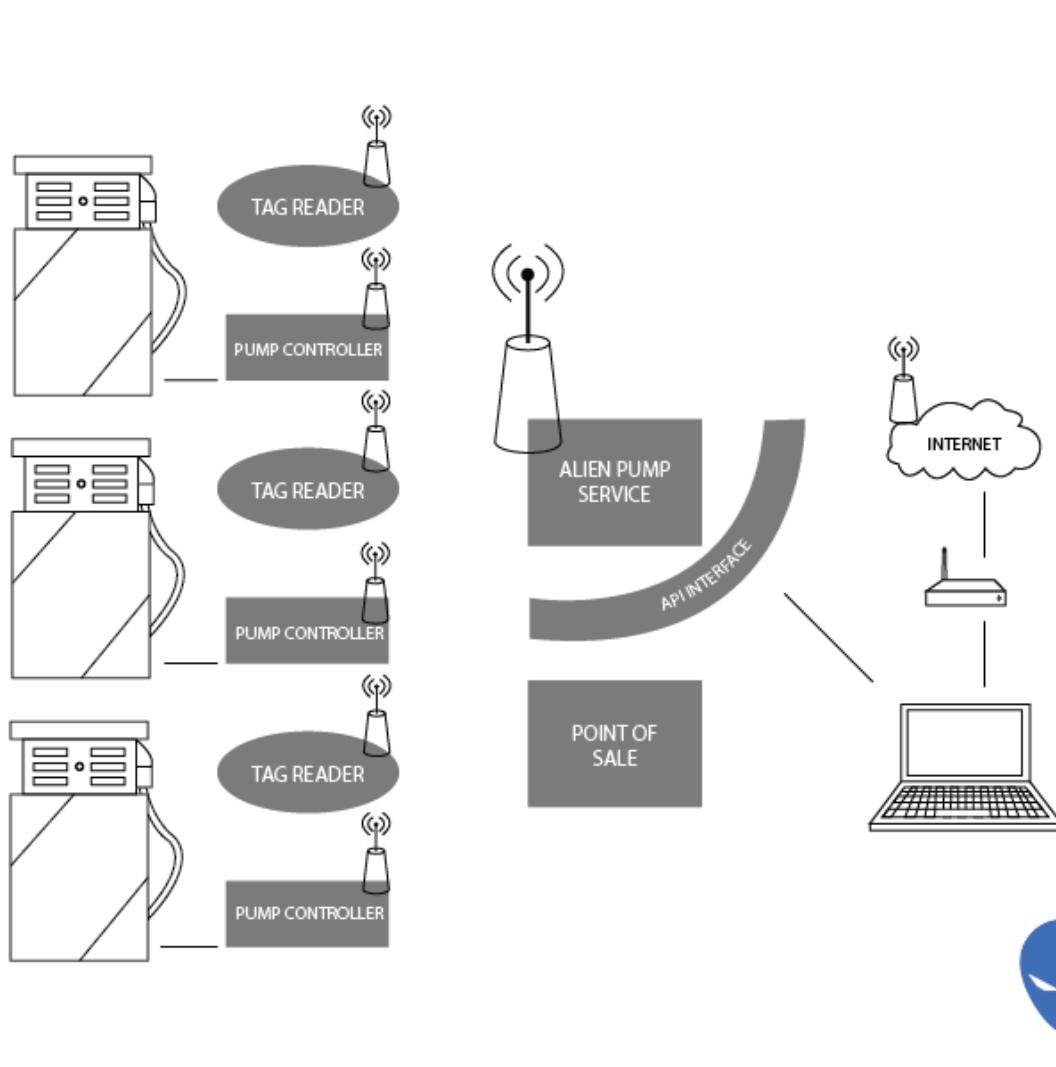

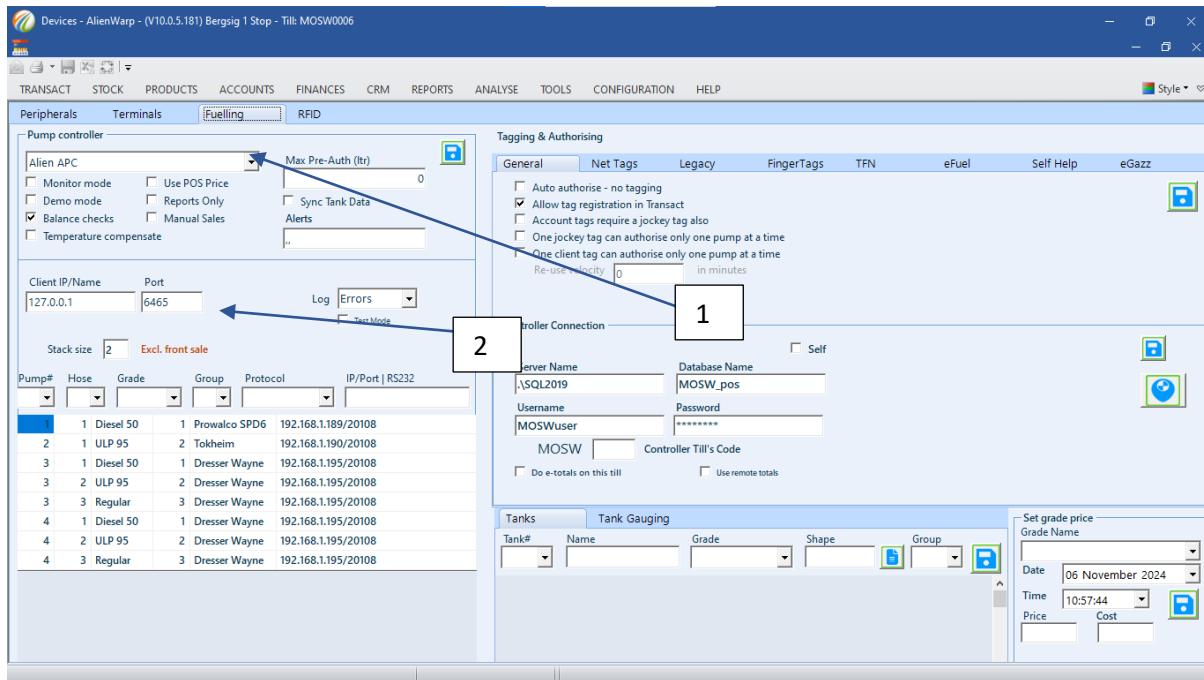

- 1) Select the fuel pump controller type in the dropdown selection menu.
- 2) Enter the client IP/Name and port number, then click the save button to capture the changes.

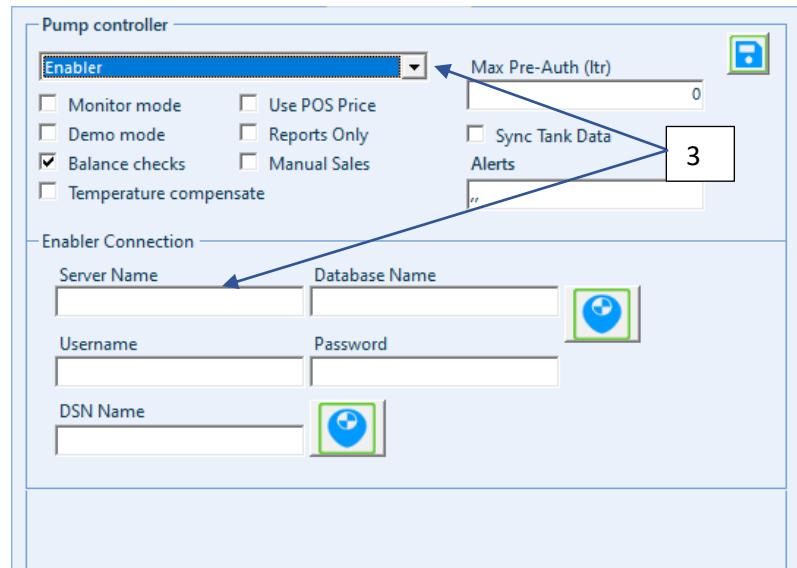


- 3) When selecting the Enabler Wifi pump controller, enter the Enabler connection details, server name, database name, username, password, and, DSN name.

## 4. Tank Gauges



- 1) Ensure there is no Bluetooth or wifi frequency interfering with your dielectric current.
- 2) Ensure your five copper wires are clean, firmly connected and that the socket is plugged in correctly.
- 3) Ensure the fuel gauge (level transducer) is fully submerged and the nozzle is laying on the floor surface area of the tank.

**WARNING** | Reverse connection of red, green/blue wires will burn out the product. Do not open the cap or touch the membrane inside.

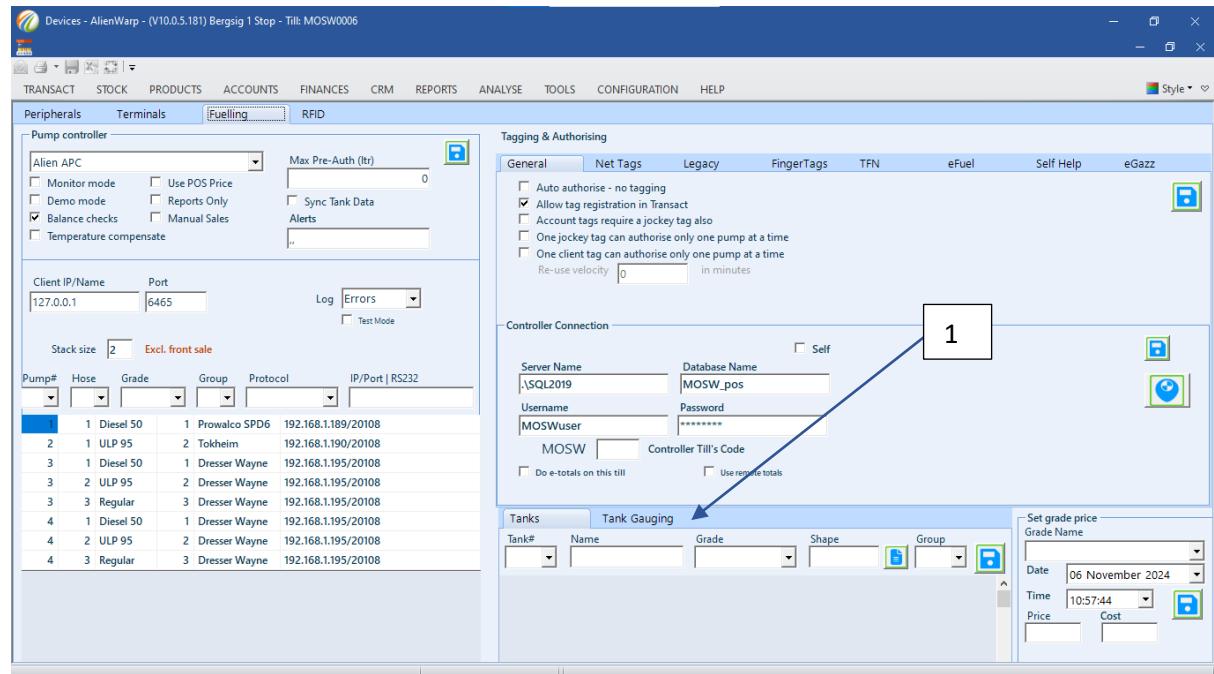

1) Select the Tank Gauging